

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint two side panel together

STEP 2: Attach top panel


STEP 3: Attach bottom panel

STEP 4: Attach toekick on

STEP 5: Attach frame on

STEP 6: Put on the adjustable shelves

STEP 7: Hinge the door onto the face frame and adjust the cover-space

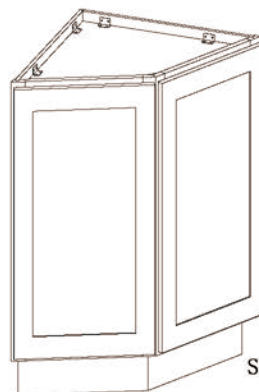


STEP:1


PARTS LIST

NO.	Description	QTY
A	SIDE PANEL	1
B	SIDE PANEL	1
C	TOP&BOTTOM PANEL	2
D	TOE KICK	2
E	FACE FRAME	2
F	ADJUSTABLE SHELF	2
G	CABINETS DOOR	2


STEP:2

9	Plastic bracket	2	
8	135 DEGREE ANGLE	3	
7	1 1/4" SOFTCLOSE HINGE	4	
6	3/4" ROUND HEAD SCREW	4	
5	BUMPER	4	
4	SHELF CLIP	12	
3	9/16" ROUND HEAD SCREW	78	
2	CLEAT	18	
1	1" FLAT HEAD SCREW FOR CARCASS	5	
NO.	Description	QTY	PICTURE


HARDWARE LIST

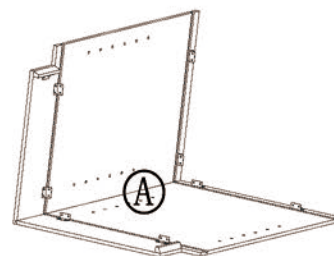


STEP:3

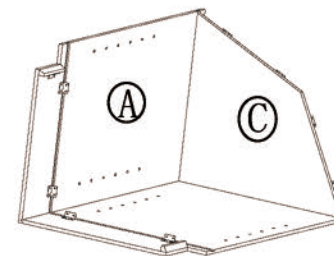


STEP:4

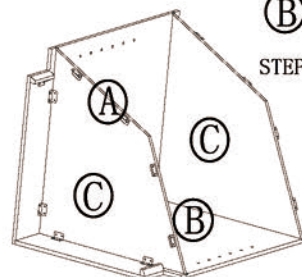


STEP:6

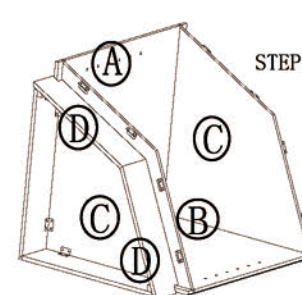


STEP:7

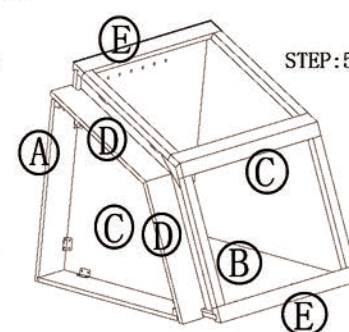

STEP:5

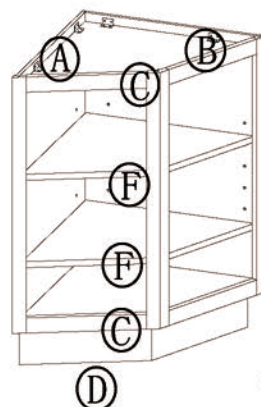

STEP:6

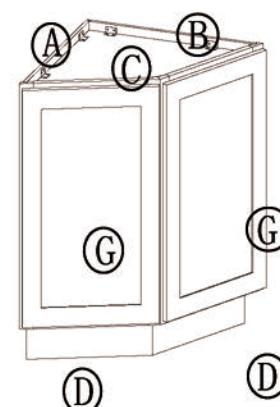

STEP:7