

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner


STEP 6: Fix door onto the frame and adjust the cover-space

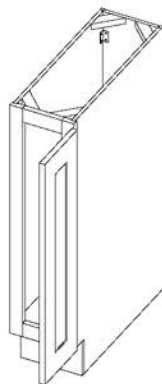


PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	FACE FRAME	1
E	TOE KICK	1
F	CABINETS DOOR	1

8	1 1/4" SOFTCLOSE HINGE	2	 1 1/4" hinge
7	3/4" ROUND HEAD SCREW	2	 3/4" round head screw
6	BUMPER	2	 Bumper
5	9/16" ROUND HEAD SCREW	40	 9/16" round head screw
4	CLEAT	10	 Cleat
3	1" FLAT HEAD SCREW FOR CARCASS	2	 1" flat head screw
2	Plastic bracket	4	 Plastic bracket
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw
NO.	Description	QTY	PICTURE


HARDWARE LIST

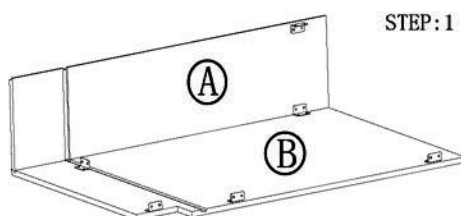


STEP: 1

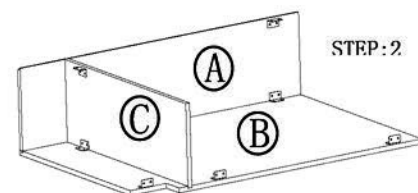


STEP: 2

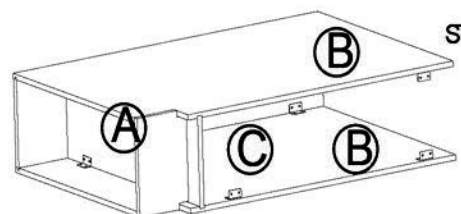


STEP: 3

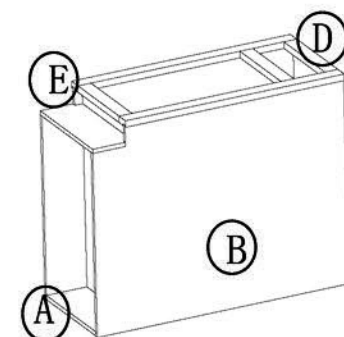

STEP: 4

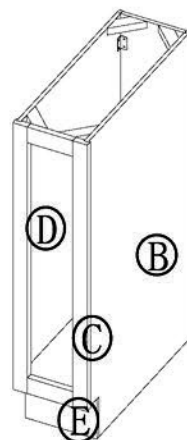

STEP: 5

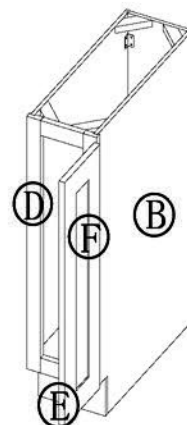

STEP: 6